


Ringer-4G

Quick Installation Manual

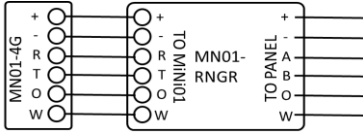

Connecting the communicator to the Ringer

- Red (+): → (+)
- Black (-): → (-)
- Green (R): → RING
- Yellow (T): → TIP
- Orange (O): → Orange (O)
- White (I): → White (I)

Connecting the Ringer to the alarm panel

- Red (+): → 12VDC Power Supply
 - Black (-): → Ground
 - Green (A): → RING
 - Yellow (B): → TIP
 - Orange (O): → to Keyswitch zone (for the optional Interactive features)
 - White (I): → to Armed status output (for the optional Interactive features)
- ✓ **WARNING:** The wiring should be done only when the panel and the communicator are disconnected from the powerline!
 - ✓ Connect the RING and TIP of the alarm panel to the A and B of the unit
 - ✓ **WARNING: Primary use only – NOT to be used with landline!**
Having a phone line connected will damage the unit!
 - ✓ Connect (+) and (-) of the Ringer to 12V-15V DC power supply

LED Indicator of the Ringer

- ✓ The two LEDs are constantly On - the communicator is connecting to the ringer and the ringer is ringing the panel
- ✓ Only one of the LEDs is constantly ON - the communication is accomplished

Configuring the alarm panel

Configuration guides for popular panels are available at www.MiNi01-4G.com

Modem configuration

For modem configuration, please refer to software configuration manual for remote UPLOAD/DOWNLOAD.